

 
 
MOOV[®]

TRAVEL GUITAR

Instructions

Opening the packaging for the first time, you'll find the main part of MOOV Travel Guitar folded into the biggest compartment of the case which can be opened by dragging the heads of the two large zippers to both edges as shown on the photo. In order to unfold and assemble MOOV Travel Guitar follow the next steps:

- 1) Loosen the safety belt and get MOOV Travel Guitar, which consists of two parts, the body (with the bridge, tuning machines and electric sound system) and neck (with fretboard).
- 2) Unfold the two parts slowly and gently until the strings are slightly stretched. Check each string to be on the corresponding roller that directs it to the tuning machines.
- 3) Place MOOV Travel Guitar on your two legs with the strings down. The two parts will form an obtuse angle.
- 4) Push it down slowly aligning the two parts and stretching the strings.
- 5) While holding and applying pressure by the one hand, in order to keep MOOV Travel Guitar aligned, secure with the other hand the two parts with the black latch. Check if all strings are in the corresponding notch of the saddle of the bridge. **Caution: Before securing the two parts, do not reduce the strain or leave the MOOV Travel Guitar at all because the string tension tends to fold it again forcefully. Risk of damage!**
- 6) Open the outer pocket of the case where the four brackets are located. Assemble them to the corresponding positions, following the order of the photographs, by screwing the thumbscrews. Make sure that the pins of the body fit into the corresponding sockets of each bracket. The bracket that rests on the left leg can be adjusted to the height according to the personal playing position so there is no need for a footrest or any other way of raising the guitar. To change the height of this bracket, remove the plastic washer from the thread of the thumbscrew and place the thumbscrew to the desired position. Then put back the washer in place. You can also place the last two brackets vertically as in photo No.4. This is convenient in postures on the right leg. The four brackets form the guitar body at the points that get in contact with the body of the player and are absolutely necessary for the right playing position.

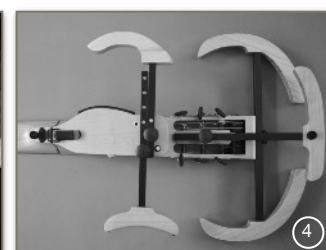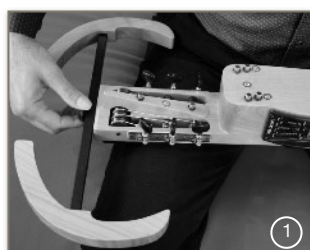

- 7) Now the MOOV Travel Guitar is ready. Just tune and enjoy!
- 8) To fold MOOV Travel Guitar, follow the reverse procedure. **Caution: Before folding MOOV Travel Guitar, loosen the string tension by turning several turns each tuning peg. Never fold and unfold MOOV Travel Guitar with the strings in high tension. High risk of damage!**
- 9) A folding guitar such as MOOV Travel Guitar needs to be accompanied by a folding case too. So if you like, you can place MOOV Travel Guitar in its' case without folding it but removing only the four brackets. Unclip the specific expanding part of the case and open the main compartment by dragging the two large zippers to the points shown in the picture. Place MOOV Travel Guitar in the case, secure it with the safety belt and close the case.

 


Electronic sound system

MOOV Travel Guitar is equipped with a high quality, dual source (piezo pickup & microphone) electronic sound system. Let's have a look at its' functions:

(1) Sound volume, (2) Three band frequency equaliser (bass, midrange, treble), (3) Phase shift, (4) Battery low indicator, (5) Headphones output, (6) Microphone volume, (7) Microphone tone, (8) Battery case, (9) Output for amplifier or audio console (at the bottom of MOOV Travel Guitar). For a more natural sound, use a classical/acoustic guitar amp rather than an electric guitar amplifier.

To activate the electronic sound system, insert a jack into the headphone or amplifier/console output. In this kind of dual source electronic sound systems, the piezo pickup is used as the main sound source. The sound of the microphone is mixed in a small percentage into the basic sound to give naturalness. Phase shift gives to the sound a different colour while is proved very helpful when we need to avoid sound feedback.

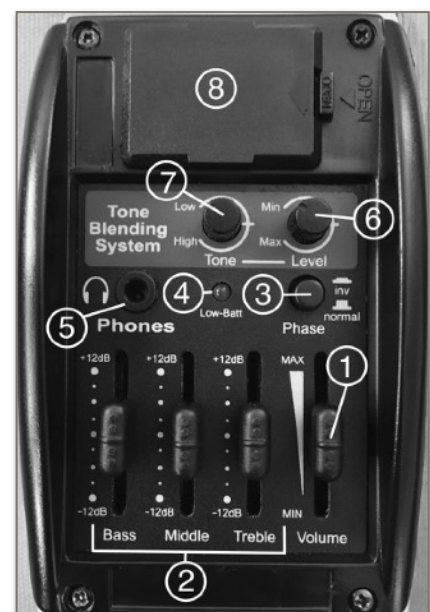

Setting a good sound is a very personal and subjective affair. The following equalizer settings are suggested just for the beginning. For amplifier or audio console, lower the middle band -12dB. For headphones, in addition to lowering the mid-range (-12dB), add bass and lower treble depending on the quality and type of headphones .

Support

Thank you for choosing MOOV Travel Guitar. For any inquiry please contact us. We will always be at your disposal!